



clickPAN-ADJUST

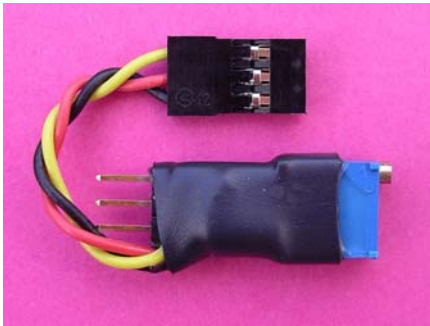

clickPAN-IR, -SERVO & -USB (called clickPAN-### here) come with a preset 5 and 10 second wait between rotation / pictures. Adding this small unit allows continuous adjustment between 5 and 35 seconds.

It is best to add the unit to an already working system.

1. Remove the battery connection from the 6pin end of the clickPAN-### device.
2. Insert clickPAN-ADJUST 3pin plug into the 3pins now free on the clickPAN-###. Be careful to keep black to -ve and red to +ve.
3. Reconnect the battery to the 3pins on the clickPAN-ADJUST. The pin furthest away from the wires is -VE, the centre pin is +VE. The third pin is not used
4. Adjusting the brass screw clockwise increases the period by ~1second per turn, rotate CCW to decrease the time.

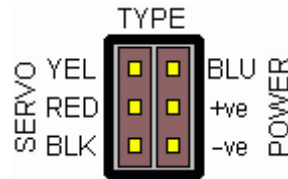

This unit only changes the timing. Small changes in the 30° rotation angle per picture can be achieved by adjusting the trimmer in the pan servo.

NOTE: Be careful with the connections! Do not invert the battery!