




liveVIEW Manual

IR commander for Canon cameras

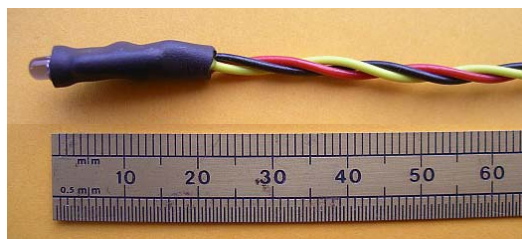

gentled liveVIEW is designed to control Canon Cameras (like the 5D, 7D, 500D & 550D) that can take still and video simultaneously in Live View from a single RC receiver channel.

Connect the 3pin connector to a standard RC Receiver channel:

- +ve Red
- ve Black
- servo Yellow/white

Operation

gentled liveVIEW connects to a single RC channel with a centre biased stick or switch. Locate the LED close to the camera IR receiver, enter Live View mode and enable the IR receiver (see the camera manual).

With the camera in Live View moving the stick in one direction takes a still image. If held over in this position a simple "continuous" mode is enabled and images continue to be captured every second.

Moving the stick on the opposite direction starts and stops the video recording. Unlike the still image which it taken immediately the stick needs to be held over for around 0.75 seconds before the signal is sent - this provides maximum protection against false triggers should there be noise in the radio control system. We recommend the stick is returned to "off" or "centre" after operation.

So for this device "speed of operation" is primary for the shutter release and "security of operation" is primary for the video.

Any resolution of still image can be captured whether the camera is recording video or not, and without affecting the video capture.

Joy-stick

Although a joy-stick is mentioned above, many RC systems have aux. switches; these can be used if they provide a centre biased operation.

Specification

Supply Voltage	3 to 5.5V. Range will reduce below 4V. (Absolute maximum voltage, 6.5V)
Supply Current	Maximum 30mA pulses when LED activated, at other times less than 1mA.
Operating Range	500mm, with unit facing camera receiver, range decreases if located obliquely to receiver.
Servo Pulses	Pulse thresholds between 1.2 - 1.3mS, and 1.7-1.8mS, Nominally 1mS is video start / stop, 1.5mS is off, and 2mS is still shutter. Pulses should be less than Supply V + 0.7V.
Repeat shutter	As long as the shutter input pulse is maintained the command will be repeated every 1 second.
Video trigger	Servo pulse must be long for >750mS to trigger
Weight	3 grams including 200mm wires & connector.

Diagnostics

Make sure that the camera IR is activated. This is often controlled via the shutter or timer control – read the camera manual. For video capture the camera needs to be set up in Live View mode.

Check the channel being used is actually changing with a "real" servo. It should stay in the idle position and move to each end for a shutter and video trigger.

If all else fails, use a digital camera as an IR detector (yes, most digicams detect IR - check it with any remote control). The **gentled** will be visible (if a little fainter than the remote) through the camera LCD display.